

## **OPTO 22**

# **ioManager and Current Value of Input and Current Value of Setpoint for PID Loops**

## **APPLIES TO**

ioManager

## **SYMPTOMS**

The Current Value of Input and Current Value of Setpoint parameters in the PID Loops Inspect mode dialog, do not display the correct values.

OptoKB Article:	KB50639
Last Review:	March 23, 2006
Revision:	2.0

## **RESOLUTION**

Opto 22 has resolved this issue.

## **VERSIONS**

- Problem was introduced in version: R5.1a
- Problem is resolved in version: R7.0d

### **DISCLAIMER**

This Opto 22 Knowledge Base ("OptoKB") article is intended to provide general technical information on a particular subject or subjects and is not an exhaustive treatment of such subjects. Accordingly, the information in this OptoKB article is not intended to constitute application, design, software, or other professional engineering advice or services. Opto 22 may modify the OptoKB articles at any time. Before making any decision or taking any action which might affect your equipment, you should consult a qualified professional.

OPTO 22 DOES NOT WARRANT THE COMPLETENESS, TIMELINESS, OR ACCURACY OF THE DATA CONTAINED IN THIS OPTOKB ARTICLE AND MAY MAKE CHANGES THERETO AT ANY TIME AT ITS SOLE DISCRETION WITHOUT NOTICE. FURTHER, ALL INFORMATION CONVEYED HEREBY IS PROVIDED TO USERS "AS IS." IN NO EVENT SHALL OPTO 22 BE LIABLE FOR ANY DAMAGES OF ANY KIND INCLUDING DIRECT, INDIRECT, INCIDENTAL, CONSEQUENTIAL, LOSS PROFIT, OR DAMAGE, EVEN IF OPTO 22 HAS BEEN ADVISED ON THE POSSIBILITY OF SUCH DAMAGES.

OPTO 22 DISCLAIMS ALL WARRANTIES WHETHER EXPRESSED OR IMPLIED WITH RESPECT TO THE INFORMATION (INCLUDING HARDWARE, SOFTWARE, AND/OR FIRMWARE) PROVIDED HEREBY, INCLUDING THE IMPLIED WARRANTIES OF FITNESS FOR A PARTICULAR PURPOSE, MERCHANTABILITY, AND NON-INFRINGEMENT. Note that certain jurisdictions do not sanction the exclusion of implied warranties: thus, this disclaimer may not apply to you.

Copyright © 2005 Opto 22. All rights reserved.